

ACCESSORY SETUP INSTRUCTION

BUMPER ASSEMBLY -- PN 5AS#-801300-6000

VALID FOR: MY2021 and Newer UFORCE 600

BEFORE YOU BEGIN: Read and understand the instructions before starting any work. Make sure that all parts are ready and that you have all the tools required for assembly.

NOTE: CFMOTO shall not be liable for any damage caused by incorrect assembly. CFMOTO recommends that all original accessories be assembled by an authorized CFMOTO dealer.

Before assembly, park the vehicle on a flat surface, put the transmission gear into Park (P) and turn off the key switch.

Zhejiang CFMOTO Power Co., Ltd. All rights reserved. Reproduction of this document, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.

MEANING OF SYMBOLS




- Indicates information with more details or tips.



- Indicates information of warning or danger.


PARTS LIST:

ITEM	PART NAME	PART NUMBER	QTY.	REMARK
1	BUMPER ASSY.	5AS#-801300-6000	1	
2	LH SIDE BUMPER ASSY.	5AS#-801310-6000	1	
3	RH SIDE BUMPER ASSY.	5AS#-801320-6000	1	
4	LH SIDE BUMPER	5AS#-801330-6000	1	
5	RH SIDE BUMPER	5AS#-801340-6000	1	
6	PLUG 32	5AS#-801311-6000	4	
7	BOLT M8×25	30006-080025870	4	
8	BOLT M8×35	30006-080035870	2	

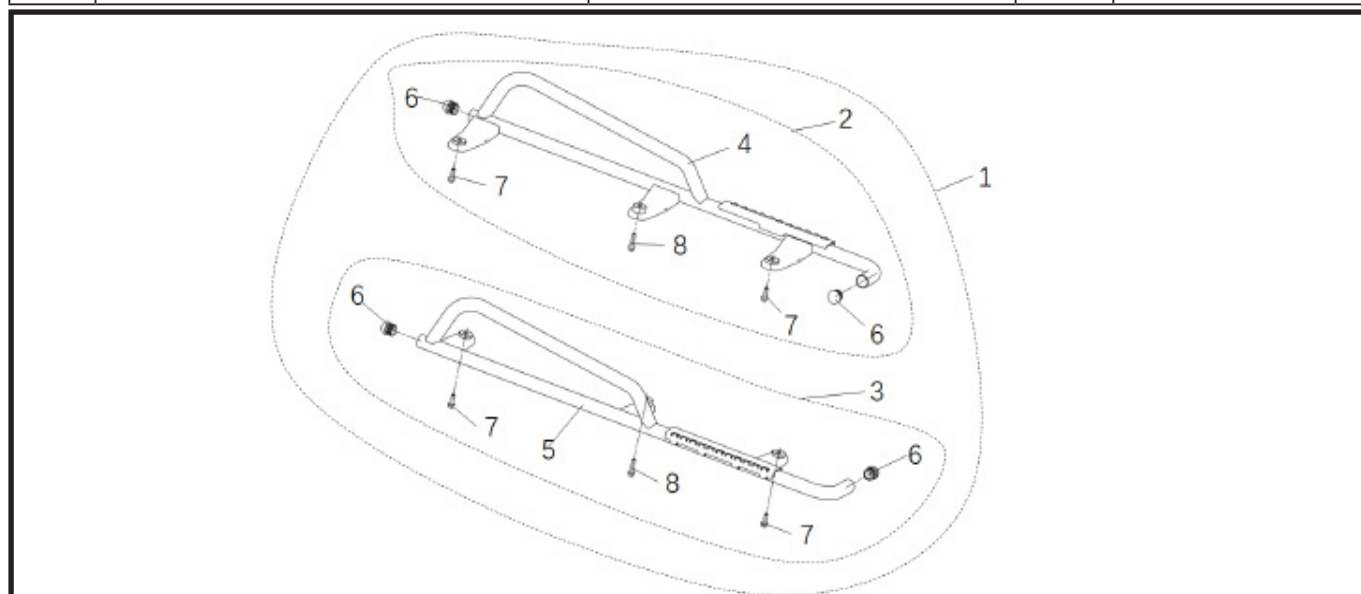


TOOL LIST:

ITEM	DESCRIPTION	QTY.	REMARK
1	13mm SOCKET	1	Recommended tools
2	RUBBER HAMMER	1	
3	PROTECTIVE GLOVES	1	

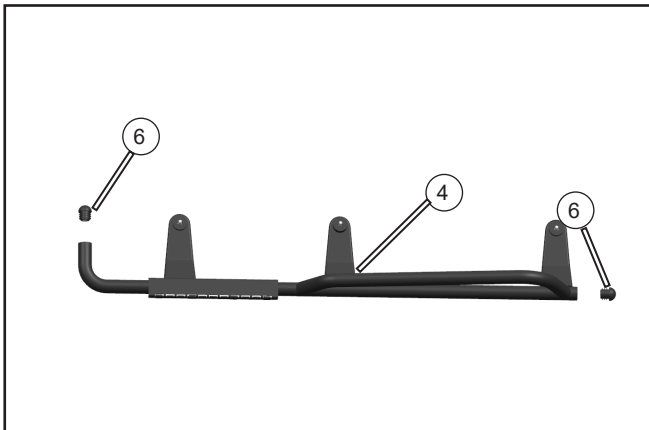

// Use a rubber hammer to install the plugs (6) into the left and right side bumpers (5,4).

i Right side bumper (5) is assembled the same.

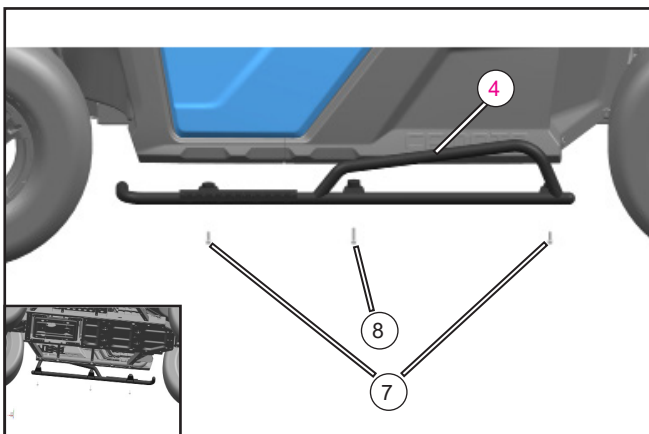

// Position the left side bumper (4 - shown) and right side bumper (5) on the bottom of the frame as shown, then install bolts (7,8) according to the positions shown in the image.

// Torque the bolts evenly to specification.

i Right side bumper (5) is assembled the same.

BOLT(7)	M8×25	30006-080025870	15-26N.m
BOLT(8)	M8×35	30006-080035870	15-26N.m