



## ACCESSORY SETUP INSTRUCTION

### SIDE MIRROR ASSY -- PN 5BY#-805500-1000

VALID FOR: MY2020 and Newer ZFORCE 950 SPORT & ZFORCE 1000 SPORT

**BEFORE YOU BEGIN:** Read and understand the instructions before starting any work. Make sure that all parts are ready and that you have all the tools required for assembly.

**NOTE:** CFMOTO shall not be liable for any damage caused by incorrect assembly. CFMOTO recommends that all original accessories be assembled by an authorized CFMOTO dealer.

Before assembly, park the vehicle on a flat surface, put the transmission gear into Park (P) and turn off the key switch.

**Zhejiang CFMOTO Power Co., Ltd.** All rights reserved. Reproduction of this document, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.

### MEANING OF SYMBOLS




- Indicates information with more details or tips.



- Indicates information of warning or danger.


### PARTS LIST:

| ITEM | PART NAME                 | PART NUMBER      | QTY. | REMARK |
|------|---------------------------|------------------|------|--------|
| 1    | SIDE MIRROR ASSY          | 5BY#-805500-1000 | 1    |        |
| 2    | RH REAR VIEW MIRROR ASSY. | 5BY0-260120      | 1    |        |
| 3    | LH REAR VIEW MIRROR ASSY. | 5BY0-260110      | 1    |        |
| 4    | SCREW                     | 30102-060020810  | 8    |        |

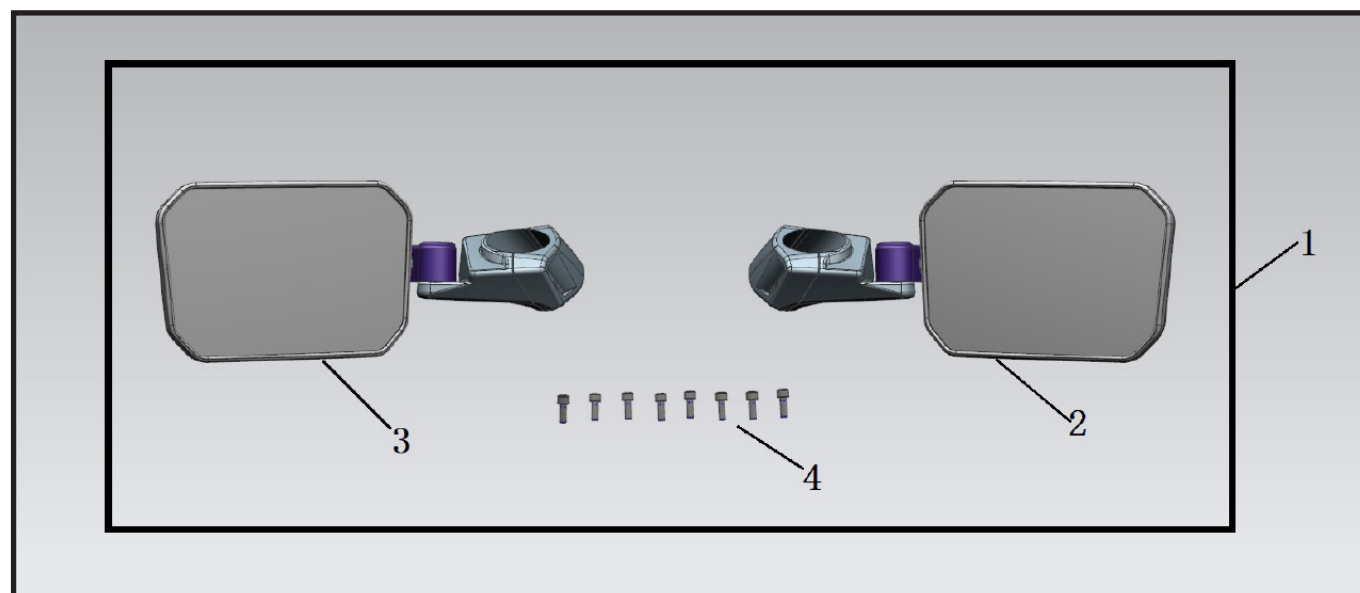


### TOOL LIST:

| ITEM | DESCRIPTION         | QTY. | REMARK            |
|------|---------------------|------|-------------------|
| 1    | PHILIPS SCREWDRIVER | 1    | Recommended tools |
| 2    | 4mm ALLEN WRENCH    | 1    |                   |
| 3    | PROTECTIVE GLOVES   | 1    |                   |

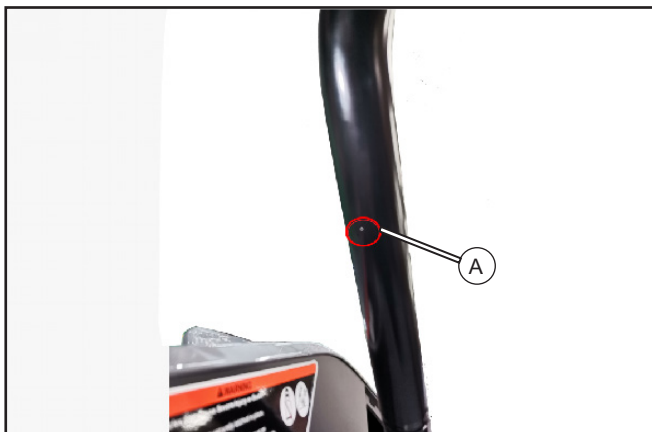

// The mirror assembly point (A) is located on the inside of the front frame bar.

**i** » Left and right are the same, the assembly point only indicates an auxiliary positioning function. The mirrors can adjust up or down on the bar as required according to driver height.

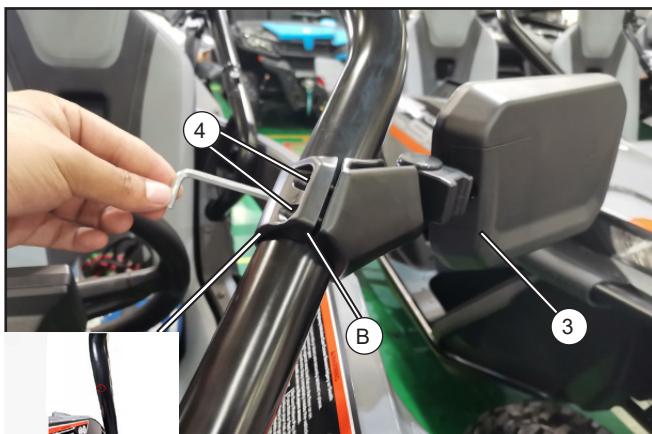

// Install the left and right mirrors (2,3) onto each side of the top bar front assembly using mounting seat (B) and screws (4).

**i** » Finger-tighten screws only at this time. Do not tighten them directly.  
» The right mirror is installed in the same way.



// The visual angle of the rear view mirror should be adjusted when the driver is seated in the driver seat.  
// Torque the screws (4) to specification.

|       |       |                 |          |
|-------|-------|-----------------|----------|
| SCREW | M6x20 | 30102-060020810 | 16-22N.m |
|-------|-------|-----------------|----------|



// According to the driver's requirement, the mirror pivot angle can be adjusted by loosening the screw (C).