

## ACCESSORY SETUP INSTRUCTION

### NERF BARS ASSEMBLY -- PN 5HY#-801300-1000

VALID FOR: MY2020 and Newer UFORCE 1000 UTVs

**BEFORE YOU BEGIN:** Read and understand the instructions before starting any work. Make sure that all parts are ready and that you have all the tools required for assembly.

**NOTE:** CFMOTO shall not be liable for any damage caused by incorrect assembly. CFMOTO recommends that all original accessories be assembled by an authorized CFMOTO dealer.

Before assembly, park the vehicle on a flat surface, put the transmission gear into Park (P) and turn off the key switch.

**Zhejiang CFMOTO Power Co., Ltd.** All rights reserved. Reproduction of this document, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.

## MEANING OF SYMBOLS




- Indicates information with more details or tips.



- Indicates information of warning or danger.


## TOOL LIST:

| S/N | PART NAME              | PART NUMBER      | QTY. | REMARK |
|-----|------------------------|------------------|------|--------|
| 1   | NERF BARS ASSEMBLY     | 5HY#-801300-1000 | 1    |        |
| 2   | NERF BARS ASSEMBLY, LH | 5HY#-801310-1000 | 1    |        |
| 3   | NERF BARS ASSEMBLY, RH | 5HY#-801320-1000 | 1    |        |
| 4   | NERF BAR, LH           | 5HY#-801330-1000 | 5    |        |
| 5   | NERF BAR, RH           | 5HY#-801340-1000 | 5    |        |
| 6   | PLUG 50                | 5HY#-801311-1000 | 4    |        |
| 7   | WASHER M8              | 30303-080112     | 6    |        |
| 8   | BOLT M8×25             | 30006-080025870  | 6    |        |

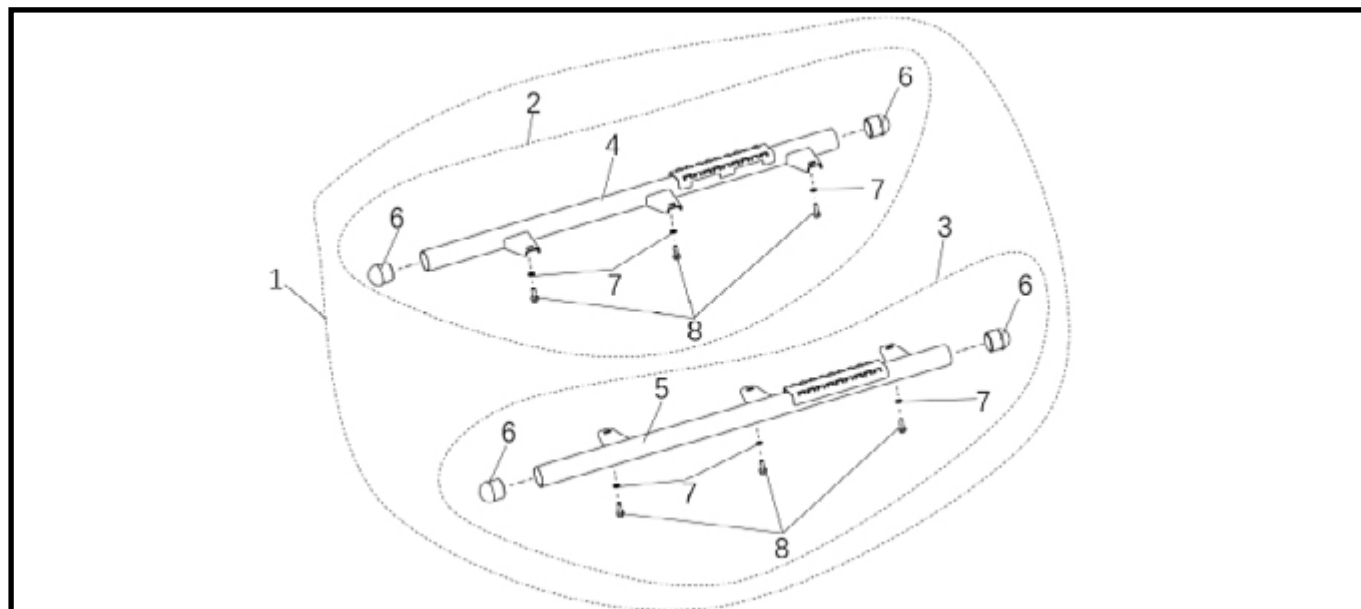


## TOOL LIST:

| ITEM | DESCRIPTION        | QTY. | REMARK            |
|------|--------------------|------|-------------------|
| 1    | 13mm SOCKET WRENCH | 1    | Recommended tools |
| 2    | TORQUE WRENCH      | 1    |                   |
| 3    | RUBBER HAMMER      | 1    |                   |
| 4    | PROTECTIVE GLOVES  | 1    |                   |

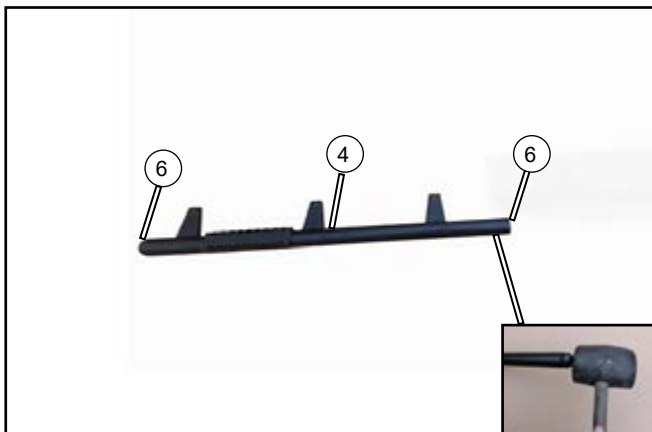


- // Assemble the left nerf bar (4).
- // Use a rubber hammer to install the plugs (6) into the nerf bar (4)

**i** Left bar shown. The right nerf bar (5) is assembled the same way.

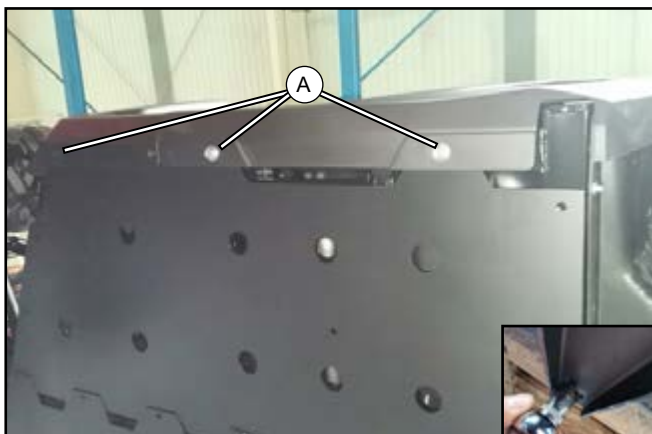

- // Remove the bolts (A) that secure the skid plate.

**i** The removal is the same on the left and right sides. Bolts will not be reused.

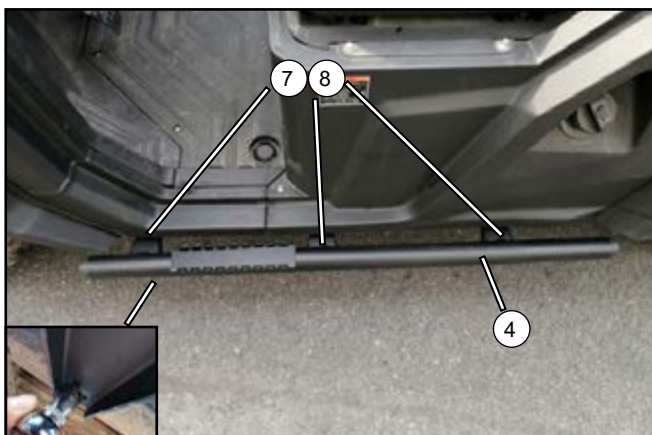

- // Place the nerf bar (4) in the assembly position as shown, then install washers (7) & bolts (8) to secure the nerf bar and skid plate.
- // Torque the bolts evenly to specification.

**i** Left bar shown. The right nerf bar (5) is assembled the same way.

|      |       |                 |          |
|------|-------|-----------------|----------|
| BOLT | M8×25 | 30006-080025870 | 15-26N.m |
|------|-------|-----------------|----------|