

ACCESSORY SETUP INSTRUCTION

CANVAS SIDE BAGS KIT, LH&RH -- PN 6GUV-804000-6000

VALID FOR: 700CL-X Heritage

BEFORE YOU BEGIN: Read and understand the instructions before starting any work. Make sure that all parts are

ready and that you have all the tools required for assembly.

NOTE: CFMOTO shall not be liable for any damage caused by incorrect assembly. CFMOTO recommends that all

original accessories be assembled by an authorized CFMOTO dealer.


Before assembly, park the vehicle on a flat surface, and turn off the key switch.

Zhejiang CFMOTO Power Co., Ltd. All rights reserved. Reproduction of this document, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.

MEANING OF SYMBOLS

- Indicates information with more details or tips.
- Indicates information of warning or danger.

ITEM	PART NAME	PART NUMBER	QTY.	REMARK
1	CANVAS SIDE BAG_LH+RH			The figures are for structure reference only.
2	CANVAS SIDE BAG_LEFT	6KMV-805120-C000	1	
3	CANVAS SIDE BAG_RIGHT	6KMV-805220-C000	1	
4	CLAMP A	6KMV-805113-C000	4	
5	CLAMP B	6KMV-805114-C000	2	
6	SCREW M6*20	6KMV-805110-C000-23	4	
7	SCREW M6*25	6KMV-805110-C000-24	2	
8	BRACKET, LH SIDE BAG	6GUV-220001-8000-0BP00	1	
9	BRACKET, RH SIDE BAG	6GUV-220002-8000-0BP00	1	
10	BUSHING 40x15x8	6GUV-220003-8000	4	
11	BOLT M8x15x8	6KMV-805110-C000-26	4	
12	DRILLING BIT	6KMV-805110-C000-28	1	

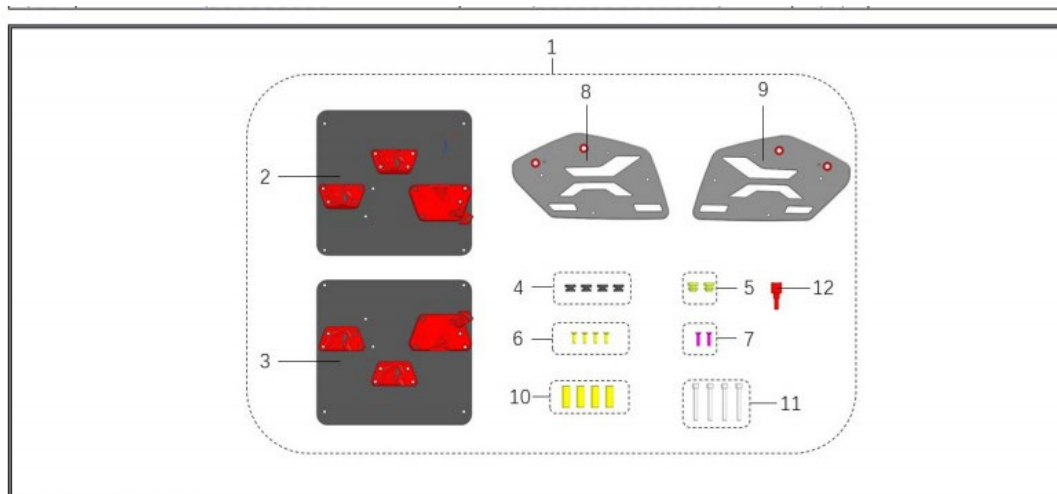

TOOL LIST:


ITEM	DESCROPTION	NOTE
1	ALLEN KEY 5mm	Tools are not included in the CANVAS SIDE BAGS KIT.
2	ALLEN KEY 6mm	
3	PHILIPS SCREWDRIVER	
4	ELECTRIC DRILL	
5	PROTECTIVE GLOVES	

ASSEMBLY and INSTALLATION

Remove the original seat (A).




Unscrew the bolts (B) and remove the deco plates (C & D).

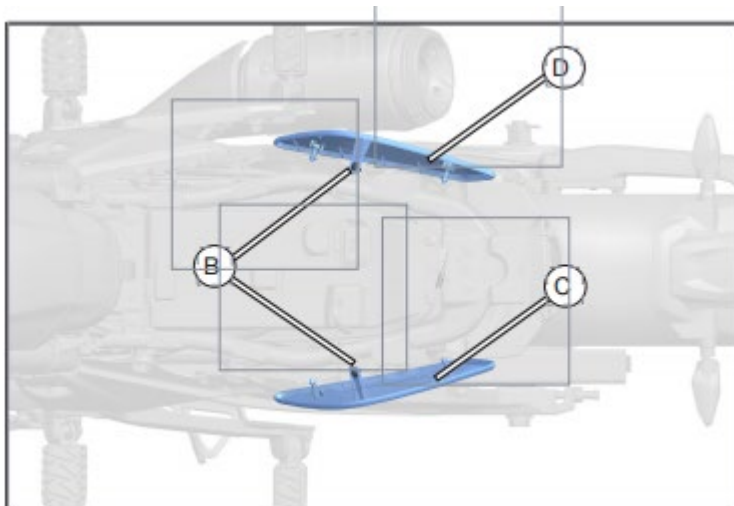


Install drilling bit (12) on electric drill, then drill 2 holes at corresponding position on deco plate (C).

Left side shown. Right side is drilled in the same method.

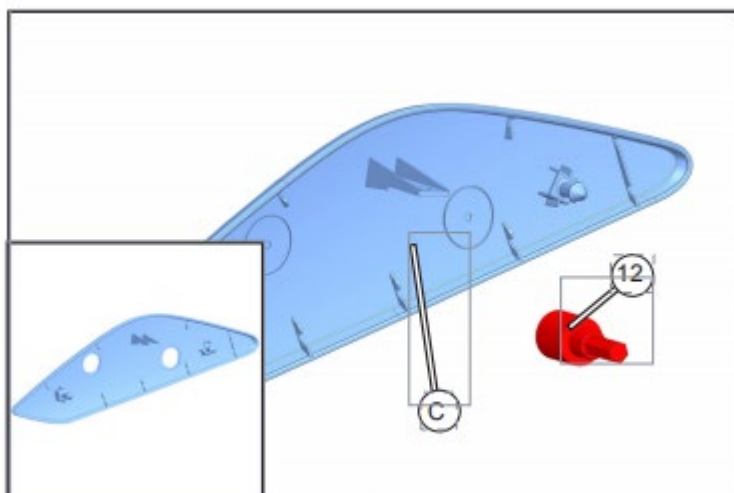


Install deco plates (C & D) back to vehicle with bolts (B).

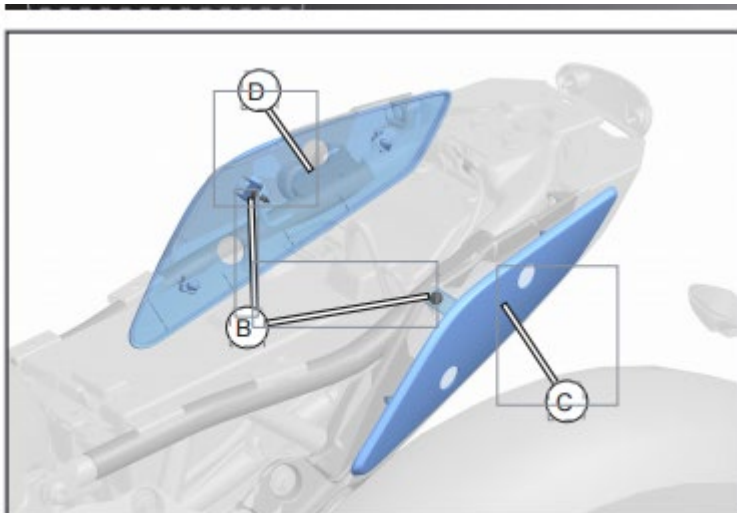

Place the BUSHING 40x15x8 (10) first. Then, fasten the BRACKET, LH SIDE BAD (8) by BOLT M8x15x8 (11).

Left side shown. Right side is assembled in the same method.


Thread glue on bolts is needed.

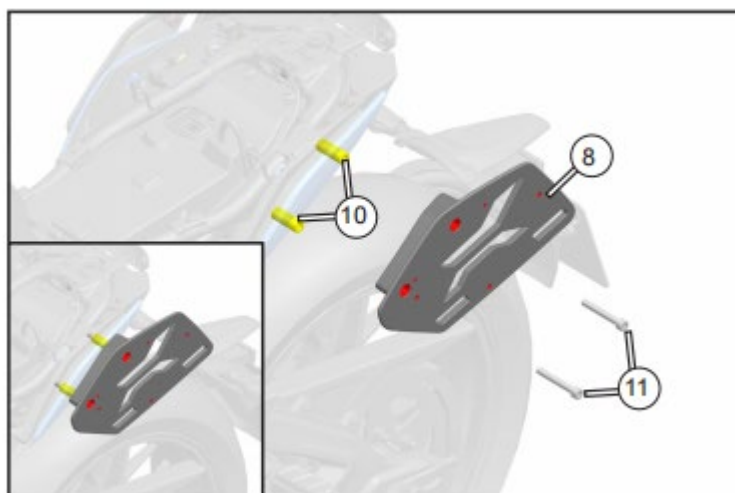

Align the clamp A (4) with the mounting hole of BRACKET, LH SIDE BAG (8), and use SCREW M6*20 (6) to tighten it. Align the clamp B (5) with the mounting hole of BRACKET, LH SIDE BAG (8), and use SCREW M6*25 (7) to tighten.

Left side shown. Right side is assembled in the same method.

Thread glue on bolts is needed.

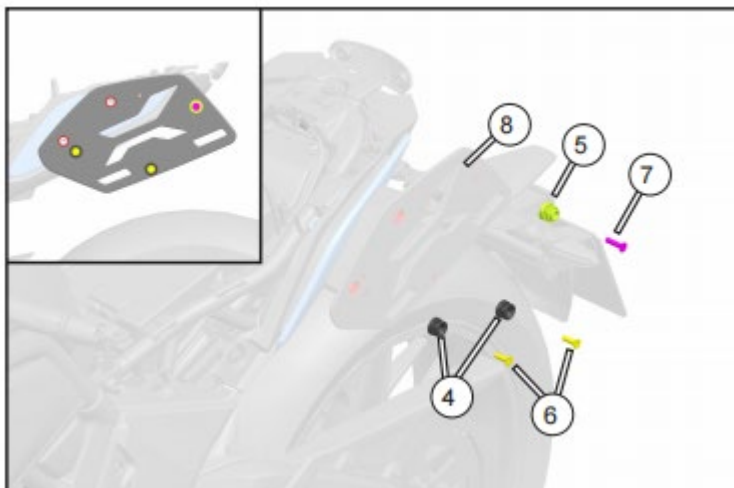


Open the lock of CANVAS SIDE BAG_LEFT (2) and install it onto the clamps.

Lock the bag after installation.

Left side shown. Right side is assembled in the same method.

The maximum carrying capacity of the canvas side bag is 3kg.

When you leave, please take the bags or things in it away to avoid property loss.

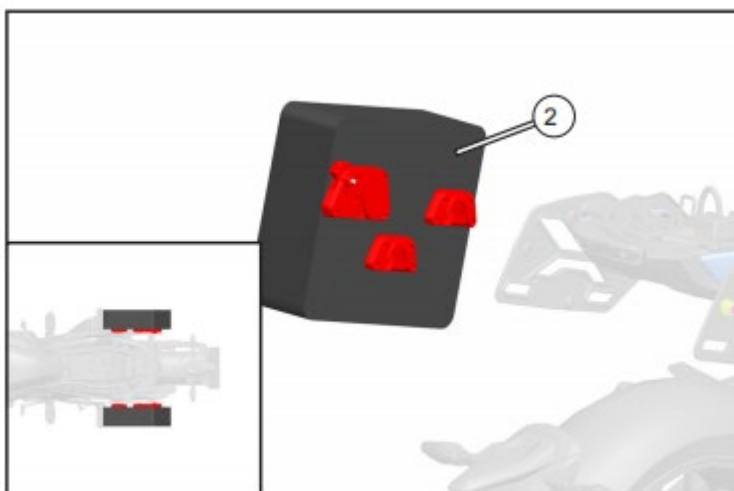

Install seat (A) and finish assembly.

