



ACCESSORY SETUP INSTRUCTION

TINTED WINDSHIELD, TALL -- PN 6KMV-805200-8000-10

VALID FOR: MY22 and later 300SS

BEFORE YOU BEGIN: Read and understand the instructions before starting any work. Make sure that all parts are ready and that you have all the tools required for assembly.

NOTE: CFMOTO shall not be liable for any damage caused by incorrect assembly. CFMOTO recommends that all original accessories be assembled by an authorized CFMOTO dealer.

Before assembly, park the vehicle on a flat surface, and turn off the key switch.

Zhejiang CFMOTO Power Co., Ltd. All rights reserved. Reproduction of this document, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.

MEANING OF SYMBOLS




- Indicates information with more details or tips.



- Indicates information of warning or danger.


PARTS LIST:

ITEM	PART NAME	PART NUMBER	QTY.	REMARK
1	WINDSHIELD	6KMV-805200-8000-10	1	

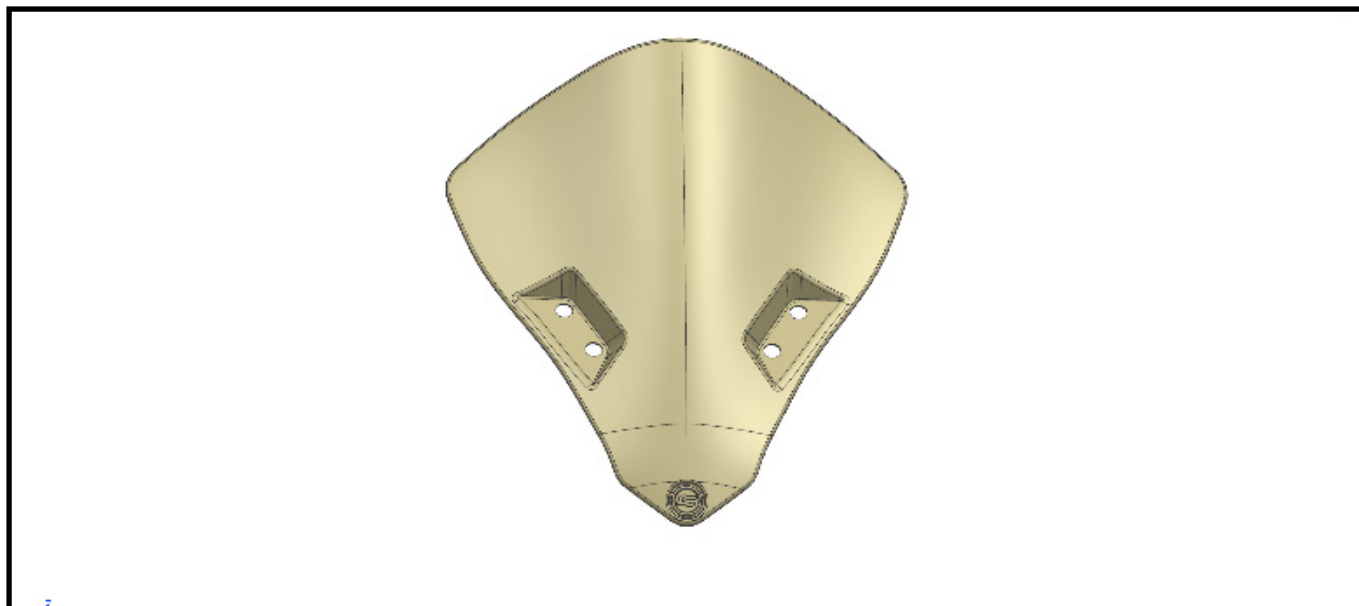


TOOL LIST:


ITEM	DESCRIPTION	QTY.	REMARK
1	PROTECTIVE GLOVES	1	Recommended tools
2	4mm ALLEN WRENCH	1	
3	10mm SOCKET	1	

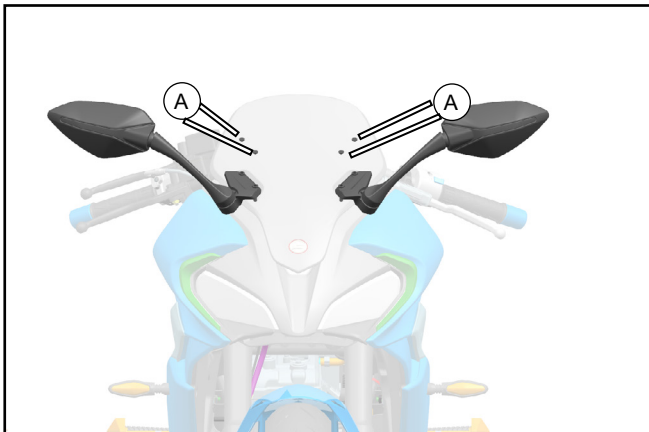


// Remove the plugs (A).

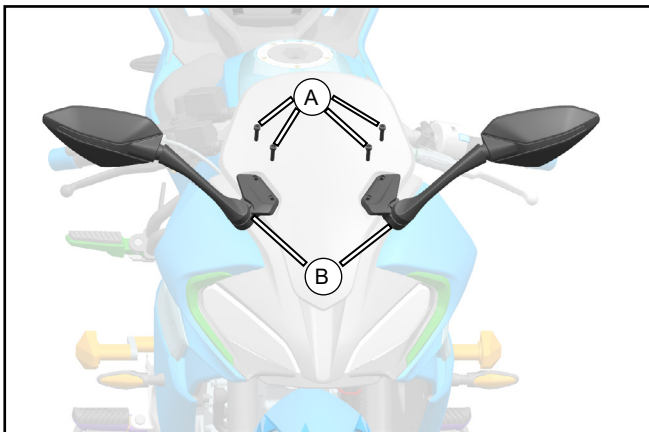


// Remove the rear view mirror bolts (A) and rear view mirrors (B).

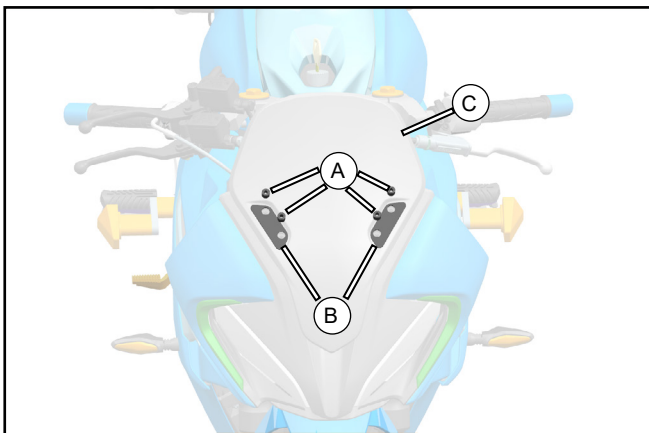


// Remove the spacers (A), mounting rubber mats (B), and windshield (C) in turn.

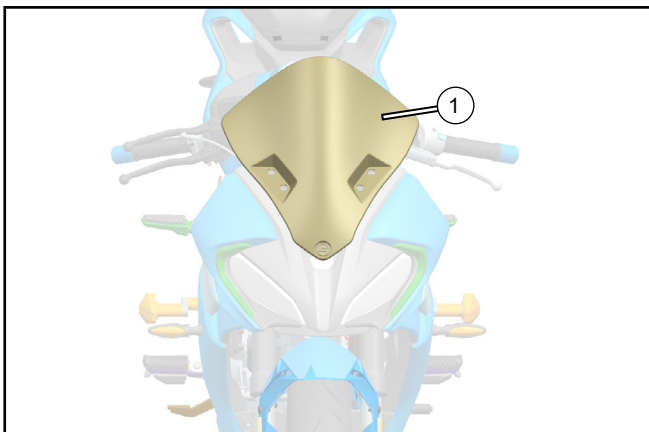


// Place the windshield (1) in the assembly position.

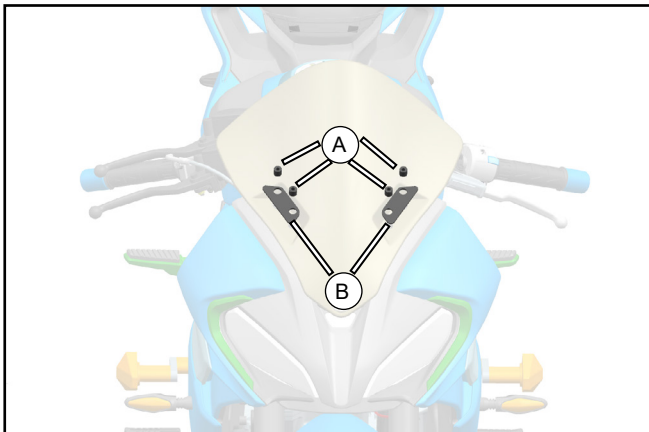

// Install the spacers (A) and mounting rubber mats (B) in turn.

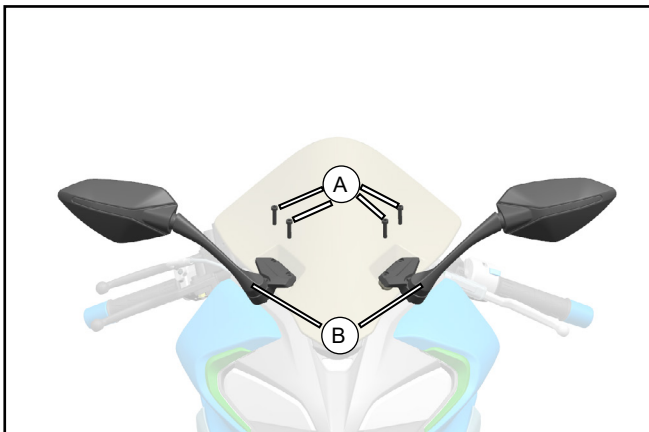

// Install rear view mirrors (B) and fasten with bolts (A).

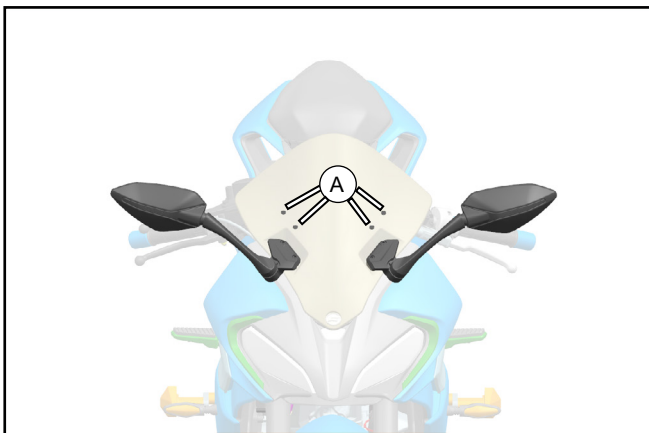

// Insert the plugs (A).

