

## ACCESSORY SETUP INSTRUCTION

### HDPE SKID PLATE -- PN 9AWV-804100-2000

VALID FOR: CF800AU-2A & CF1000AU "Overland"

**BEFORE YOU BEGIN:** Read and understand the instructions before starting any work. Make sure that all parts are ready and that you have all the tools required for assembly.

**NOTE:** CFMOTO shall not be liable for any damage caused by incorrect assembly. CFMOTO recommends that all original accessories be assembled by an authorized CFMOTO dealer.

Before assembly, park the vehicle on a flat surface, put the transmission gear into Park (P) and turn off the key switch.

**Zhejiang CFMOTO Power Co., Ltd.** All rights reserved. Reproduction of this document, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.

### MEANING OF SYMBOLS




- Indicates information with more details or tips.



- Indicates information of warning or danger.


### PARTS LIST:

| ITEM | PART NAME                | PART NUMBER      | QTY. | REMARK |
|------|--------------------------|------------------|------|--------|
| 1    | NUT M6                   | 30202-060170     | 2    |        |
| 2    | WASHER 30X8              | 9AWV-804108-2000 | 20   |        |
| 3    | RETAINER                 | 9AWV-804106-2000 | 22   |        |
| 4    | BOLT M6×16               | 30006-060016870  | 11   |        |
| 5    | BOLT M6x40               | 30006-060040870  | 14   |        |
| 6    | WASHER 30X4              | 9AWV-804109-2000 | 9    |        |
| 7    | LOCK NUT                 | 9AWV-804107-2000 | 1    |        |
| 8    | BOLT M6×20               | 30006-060020870  | 1    |        |
| 9    | BRACKET, REAR SKID PLATE | 9AWV-804170-2000 | 4    |        |
| 10   | FRONT SKID PLATE         | 9AWV-804101-2000 | 1    |        |
| 11   | MIDDLE SKID PLATE        | 9AWV-804102-2000 | 1    |        |
| 12   | REAR SKID PLATE          | 9AWV-804103-2000 | 1    |        |
| 13   | SIDE SKID PLATE          | 9AWV-804104-2000 | 2    |        |
| 14   | PLASTIC SKID PLATE       | 9AWV-804100-2000 | 1    |        |

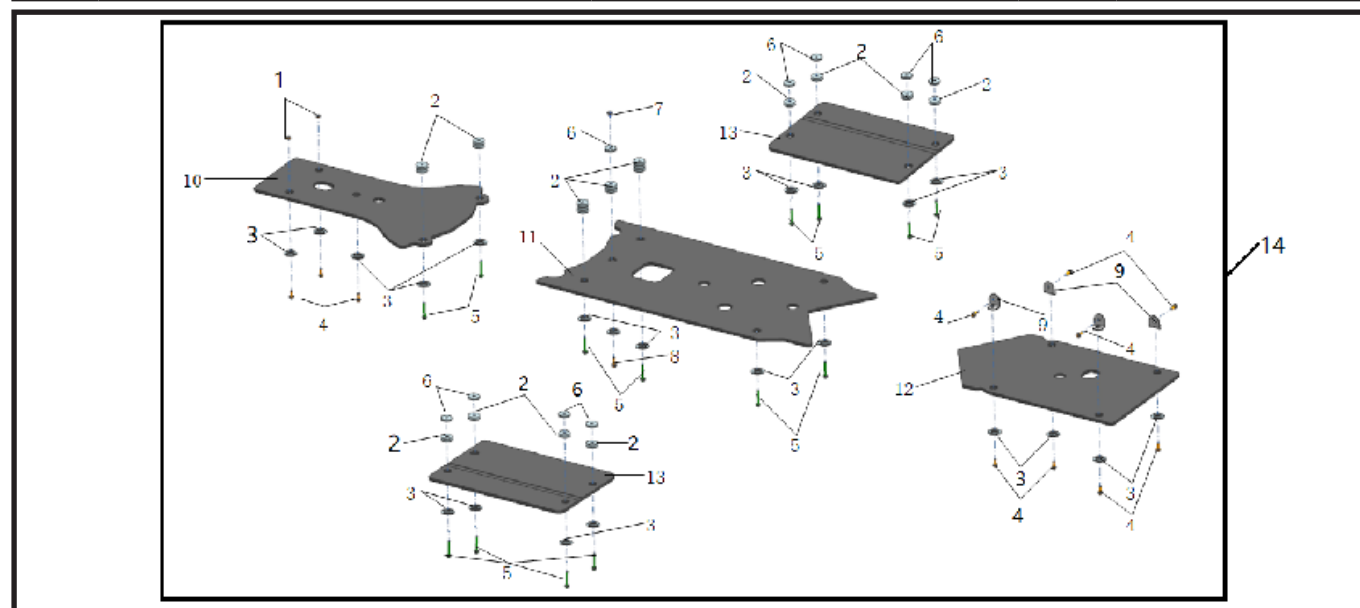


### TOOL LIST:


| ITEM | DESCRIPTION       | QTY. | REMARK            |
|------|-------------------|------|-------------------|
| 1    | 10mm SOCKET       | 1    | Recommended tools |
| 2    | PROTECTIVE GLOVES | 1    |                   |

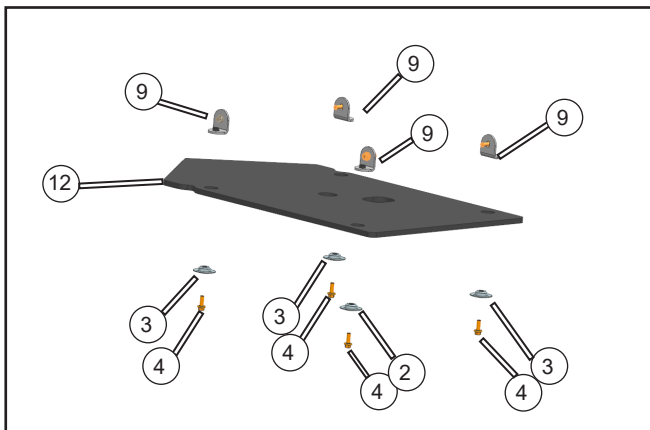

// Install the brackets (9) on the rear skid plate (12) with bolts (4) and retainers (3). Finger-tighten only.

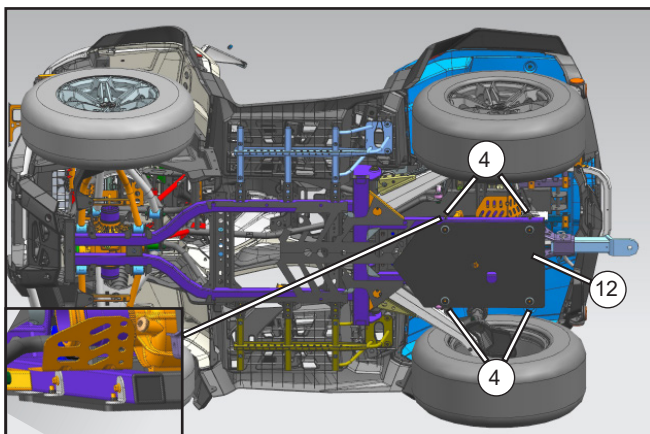


// Secure both sides of the assembled rear skid plate (12) to the rear vehicle frame with additional bolts (4), then tighten all bolts (4) evenly.

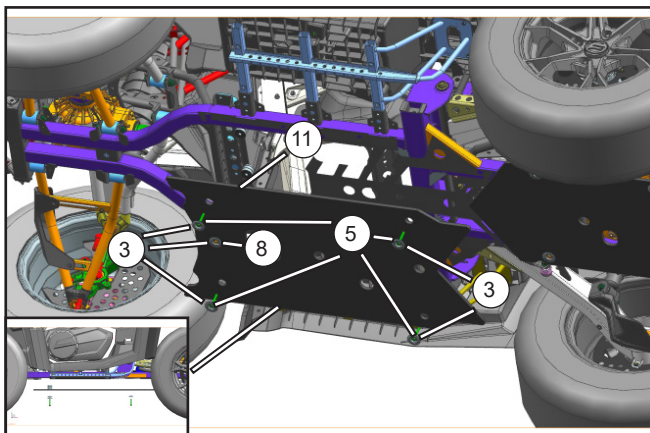


// Install the middle skid plate (11) to the corresponding position with bolts (5,8) and retainers (3), then tighten all bolts evenly.

**i** Before securing the middle skid plate, check to ensure washers (2,6) and lock nut (7) have not fallen off. If they fall off, they must be installed back on the middle skid plate.

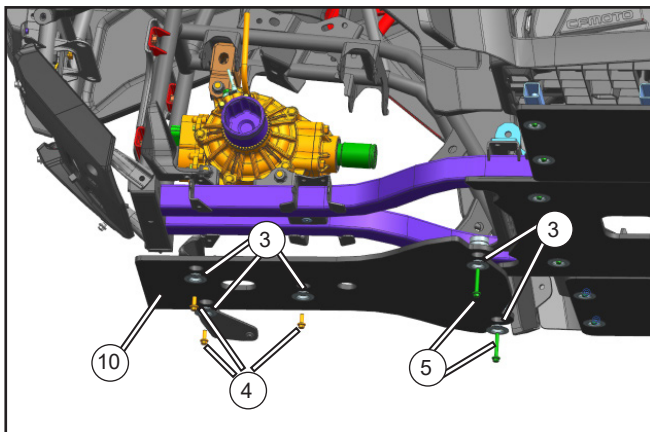

// Install the front skid plate (10) to the corresponding position with bolts (4,5) and retainers (3), then tighten all bolts evenly.

**i** Before securing the front skid plate, check to ensure the washers (2) and nut (1) have not fallen off. If they fall off, they must be installed back on the front skid plate.

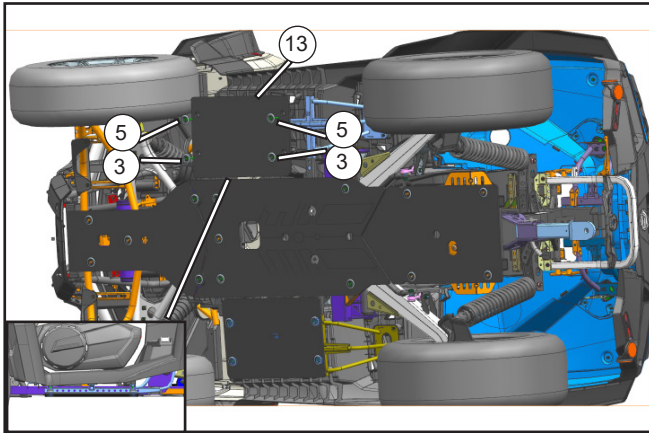

// Install the side skid plates (13) to the corresponding position with bolts (5) and retainers (3), then tighten all bolts evenly.

**i** Before securing the side skid plates, check to ensure the washers (2,6) have not fallen off. If they fall off, they must be installed back on the side skid plates.